


CUT

REMOVE PROTECTIVE COVER



R2 x6


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




R3 R4




R1 x6

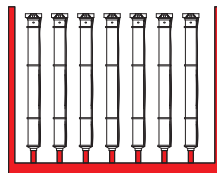

R5

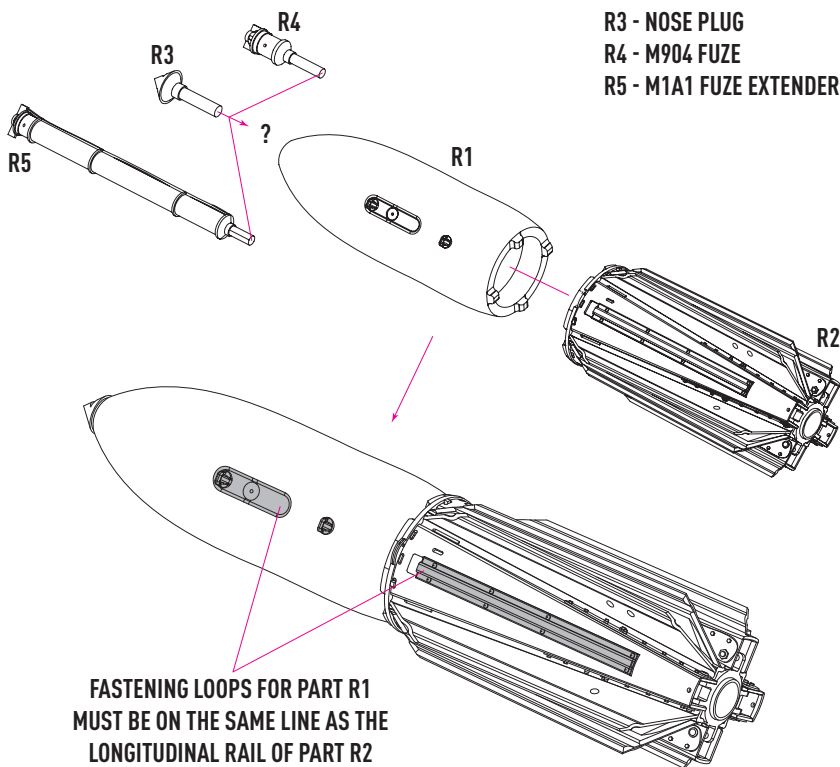

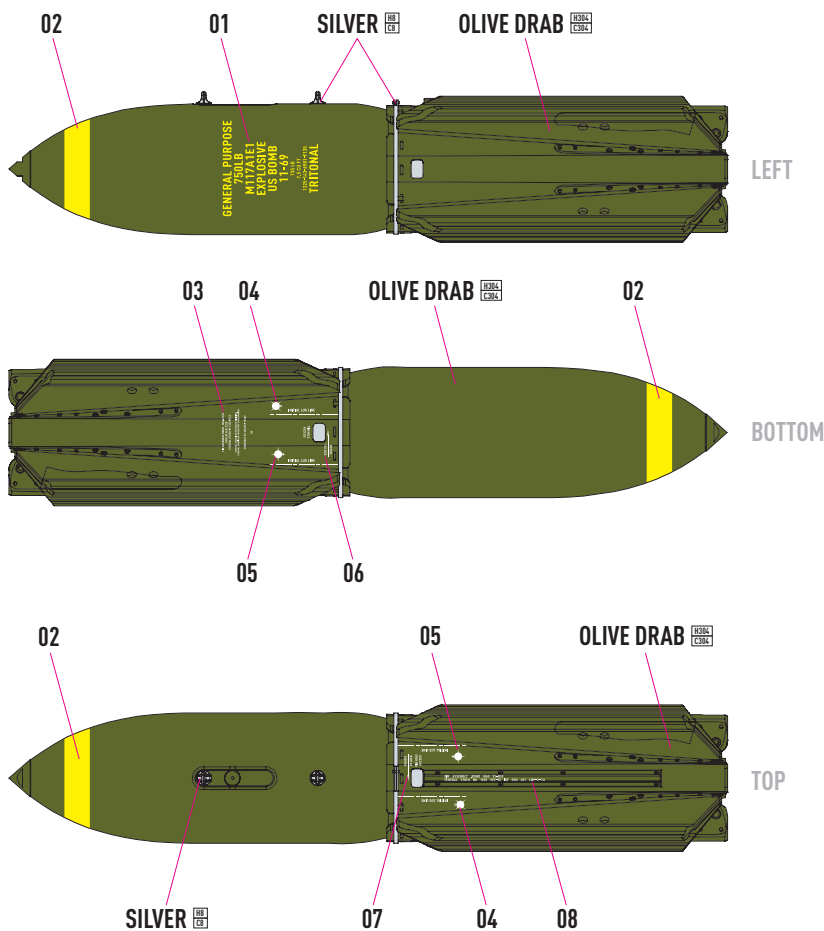

FUZING OPTIONS

COLORS	GUNZE / AODEUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304
SILVER	H8	C8

M1A1	
M904	
NOSE PLUG	